


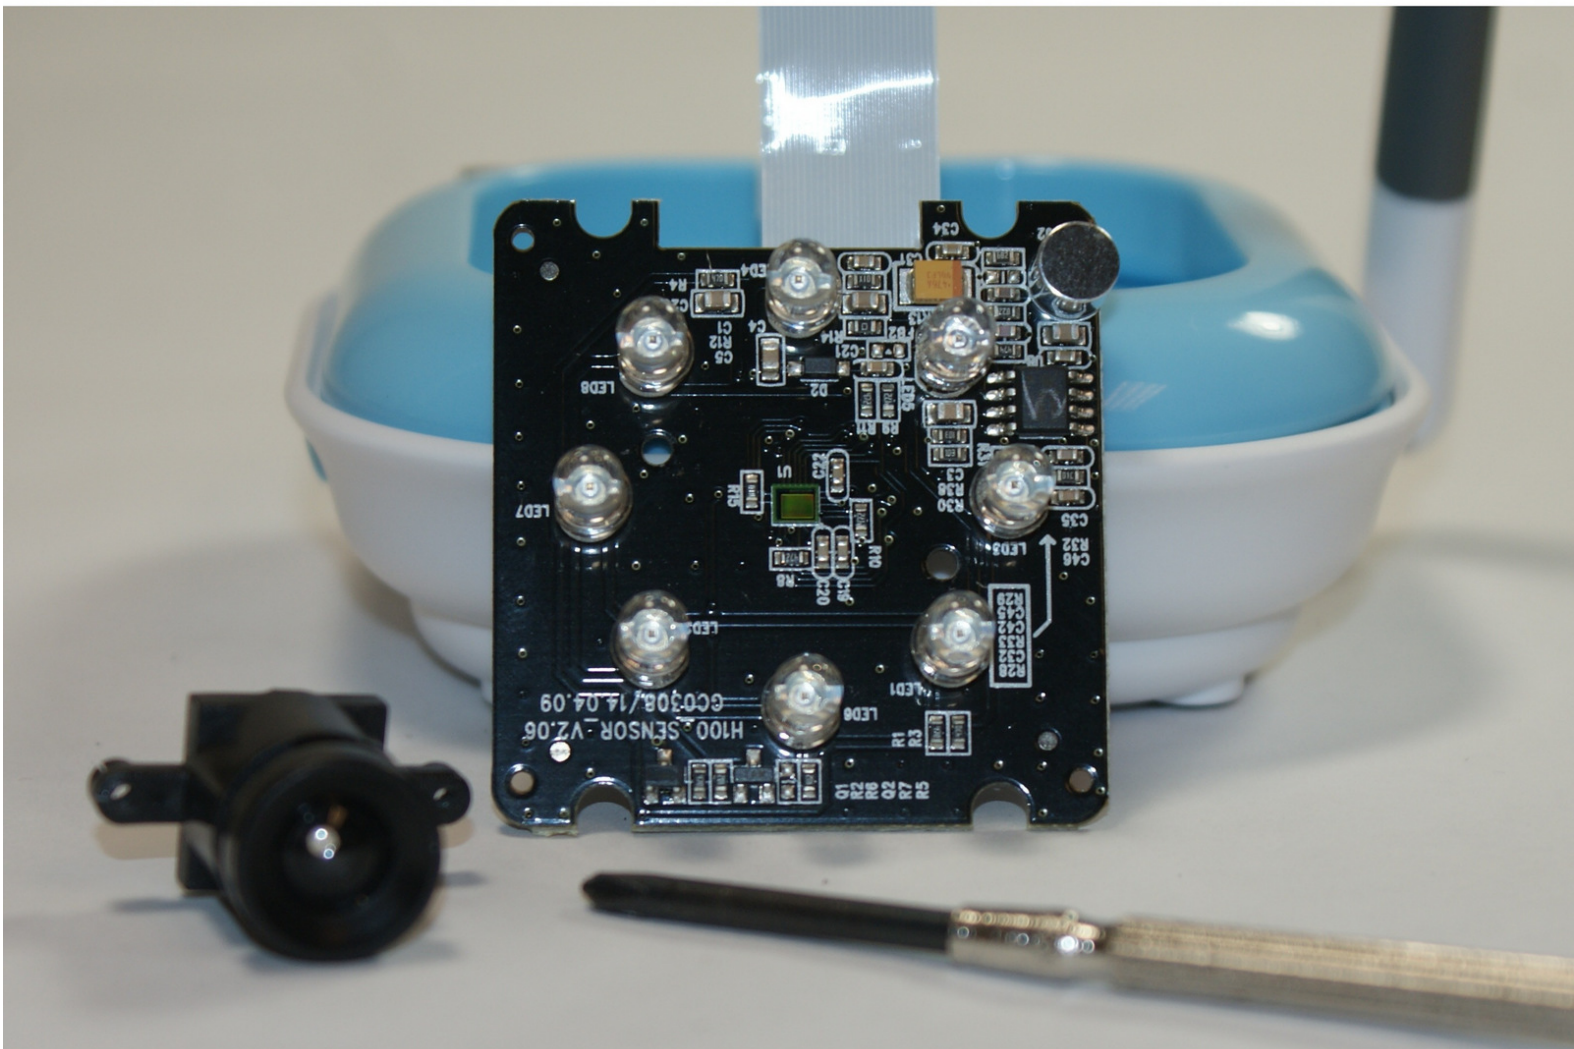

# Infant Optics DXR-5 Camera Lens Replacement

The purpose of this guide is to show the steps required to replace the camera lens of the camera unit for the Infant Optics DXR-5.

Written By: Charles Neal



## INTRODUCTION

Ensure that the camera unit is unplugged prior to starting this guide.

Secure screws to avoid losing them.


Screws are small and can pose a possible choking hazard for small children.



### TOOLS:



- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Camera

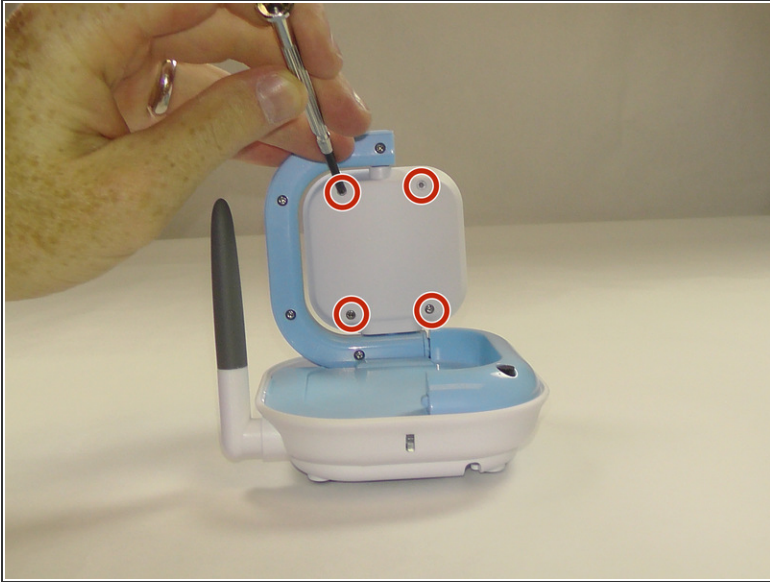

- Using a Phillips #2 screwdriver, remove the four, 6.0 mm Phillips screws from the back of the camera unit.



## Step 2

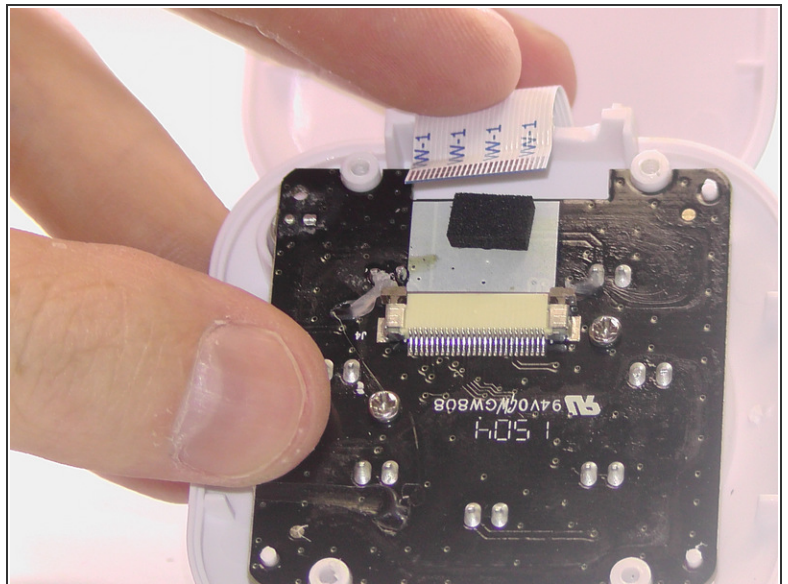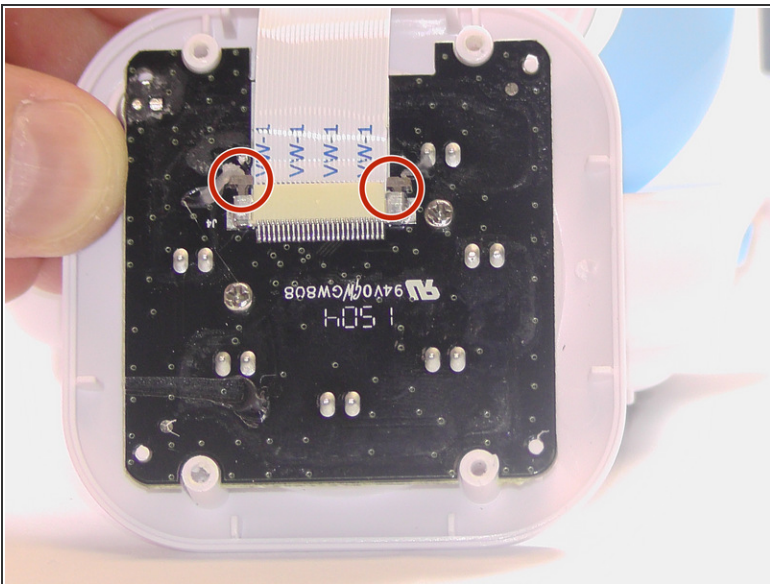

- Pull up on the two beige tabs to the left and right of the ribbon connected to the camera.
- Pull the ribbon straight out from the camera.




### Step 3

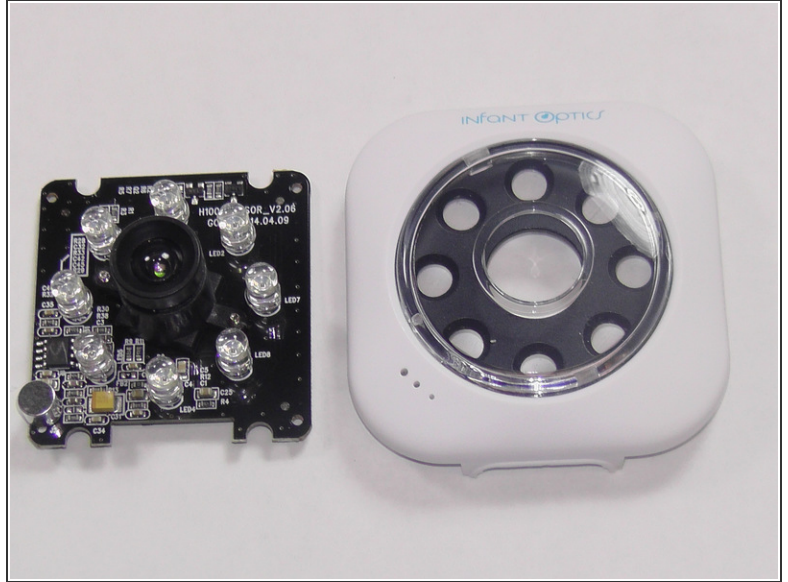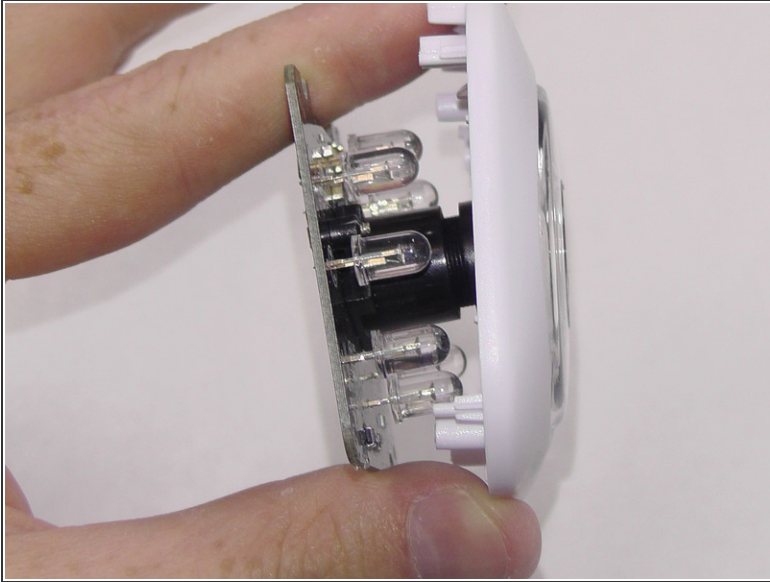

- Remove the front face plate of the camera unit by carefully pulling it off.

### Step 4 — Camera Lens

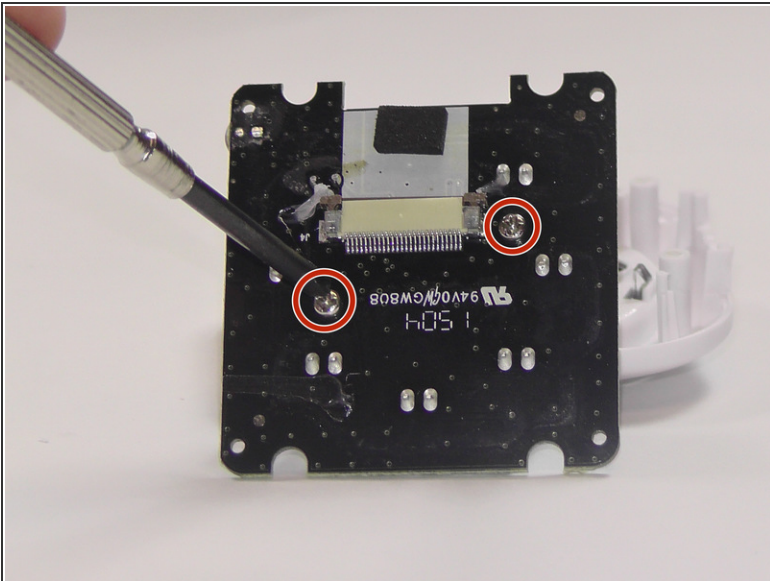

- Using a Phillips #2 screwdriver, remove the two 6.0 mm Phillips screws that hold the camera lens on.
- ☑ These two screws have a different thread than the four screws that secure the camera unit's housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 04:28:17 PM.